

ROX 20KG HAND GREASE KIT

RXE20

- Rox EZY-LUBE is a manual operated grease unit to suit 20kg standard grease pail with a unique Han-D-Gun detachable hand piece.
- Can handle grease up to NLGI2.
- Quality Australian made.
- Supplied complete with pail lid, pump, 4mt of hose, follower plate and detachable pressure head hand piece.




QUALITY AUSTRALIAN MADE

MANUAL OPERATED GREASE UNIT TO SUIT 20KG STANDARD GREASE PAIL

Uses:	Up to NLGI2 grease
Discharge Quantity	100 shots after priming
Suitability	20kg grease pails

Once primed, the pressure head hand piece can be detached from the hose/pump and is capable of delivering approximately 100 high pressure shots of grease before repriming is required.

ROX 20KG HAND GREASE KIT

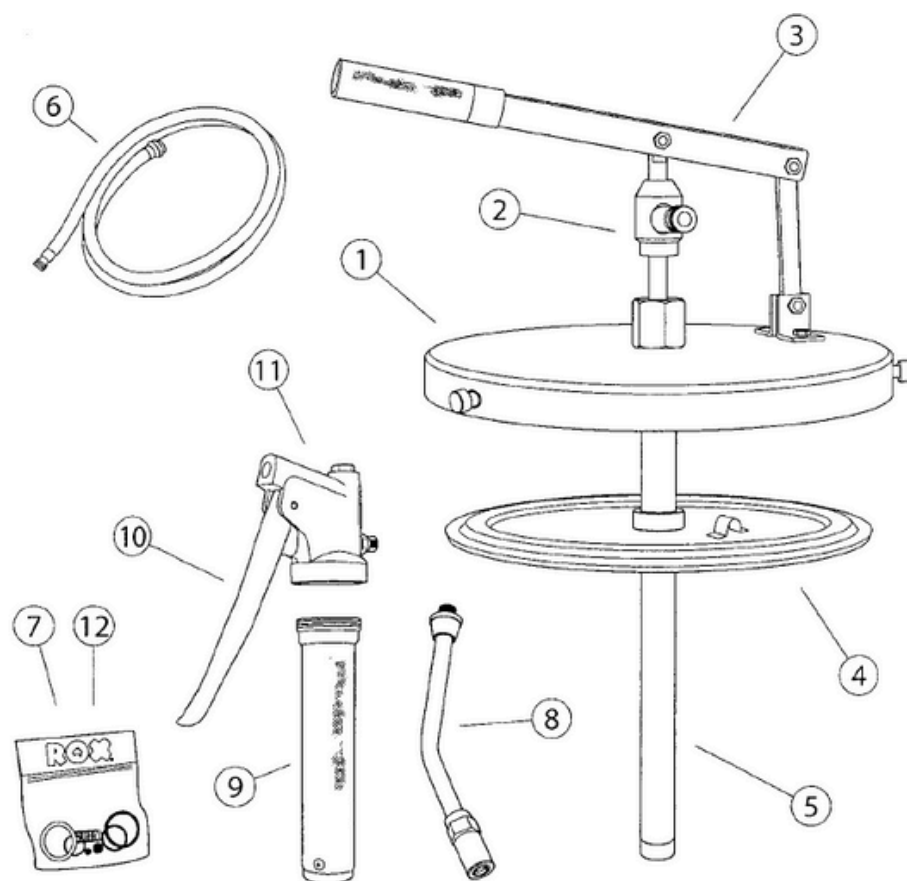

1	Pail Lid with Fittings
2	Inner Tube, Head & Piston Assembly
3	Lever
4	20kg Pail Follower Plate
5	Outer Tube and Lock Nut
6	4Mtr Hose with Tail and Female Coupler
7	Ezy-Lube Seal Kit
8	Nozzle & Extension Tube
9	Cylinder
10	Handle and Piston Assembly
11	Head Assembly
12	Hand-D Gun Seal Kit

Priming Instructions

Remove the pail lid and press the follow-up plate firmly onto the grease expelling all air from below the plates.

Break pail pump at large hex base-nut and reassemble pump through pail lid.

Make sure the pail pump is correctly positioned (usually with the outlet pointing away on the right hand side of the operator) and firmly attach the pail pump to the pail lid in order to prevent wobbling during operation.

Before connecting the lever handle insert a bolt through the pail pump piston rod head and apply a full stroke until all air is expelled. Return the piston rod to the down position and attach lever and hose. Operate the lever with a full stroke until grease appears at the opposite end of the hose.

Attach the pressure head and continue until the silver disc appears at the hole in the pressure head handle. This indicates the pressure head is full (Approx. 100 high pressure shots).

Open air release an pressure head and operate pressure head lever until all air is expelled. Close air release and your EZY-LUBE is ready for operation.

NOTE: This procedure is only necessary on the first pail. On later pails just transfer the EZY-LUBE and carry on.

REMEMBER: the pressure head when full can be removed and operated independently of the hose.

Should the hose become damaged, remove it and fill the pressure head directly from the pump outlet. It is not recommended to install a longer hose than that supplied with your ROX EZY-LUBE.

Avoid contaminating your grease with dirt and other contaminants as it will affect the performance and operation of the EZY-LUBE grease unit.